

KARMA

MUSIC WORKSTATION

Quick Tour

Listen to the Factory Demo Songs:

- Press the [SEQ] key ➤ Press the [F1] key (below the display), then press the [▲ or ▼] Cursor key (below the Dial), to highlight the song name field (“000: Planet KARMA”, “001: K Logik” etc.) ➤ Select a desired song using the [▲ or ▼] keys to the left of the display ➤ Press the [START/STOP] key (in the SEQUENCER control section) to begin playback ➤ Press the [START/STOP] key again to stop playback.

Select and play Programs or Combinations:

- Press the [COMBI] or [PROG] key (to the left of the display) to select either Combinations or Programs ➤ Press one of the PROGRAM Bank [A, B, E, F or G] keys, or COMBI Bank [A, B or E] keys (upper right section of the front panel). *Note that the C, D and F banks do not contain Programs or Combis in this demo unit.* ➤ Use the [▲ or ▼] keys, the numeric keypad, or the [DIAL] to select and play sounds from each bank.

Try out the Realtime Controllers:

As you play, try working with the Realtime Control knobs, Joystick and Switches 1&2 (far-left of the front panel). They're all programmable for every sound, and just like the KARMA controls, any changes you make to these controllers can be recorded into the Sequencer!

Select and play Programs or Combinations by Category:

- Press the [PROG] or [COMBI] key ➤ Press the [F8] key below “UTILITY” in the display, then press the [▼]Cursor key to highlight “Select by Category” in the Popup menu ➤ Press the [F8] key below “OK” ➤ Use the [▲ or ▼] keys (left of the display) to select a sound category, then press the [▲ or ▼] Cursor keys to move to and play selected sounds.
- To return to the main Play Mode page for Programs or Combinations, press the [F7] “Cancel” or [F8] “OK” key below the display.

TIP: Make sure to try the CHORD TRIGGER KEYS when selecting Programs and Combinations!

Exploring the KARMA function in Programs and Combinations:

- While in either Program or Combination mode, press the [F5] key (K.RTC) below the display.
- Confirm that the KARMA ON/OFF key is on/lit (it's located near the Volume Slider).
- Try the four CHORD TRIGGER keys.
- Turn one of the eight REALTIME CONTROL knobs; The display shows the parameters you can control.
- Press the [SCENE] key to hear another pre-programmed setting of these controllers.
- Try varying the knobs and switches. Select different Programs and Combinations. Enjoy!

To return a knob to its original value, hold the [ENTER] key and rotate the knob.

To return a Scene to its original status, hold the [ENTER] key and press the [SCENE] key.